

LENOXX

MODEL NO: CD7400N

STEREO 3CD MINI HI-FI SYSTEM WITH AM/FM RADIO, CASSETTE AND TURNTABLE



INSTRUCTION MANUAL

Please read and retain these instructions for future reference.



This symbol is intended to alert you to the presence of un-insulated dangerous voltage within the product's enclosure that might be of sufficient magnitude to constitute a risk of electric shock. Do not open the product's case.



This symbol is intended to inform you that important operating and maintenance instructions are included in the literature accompanying this product.

IMPORTANT SAFETY INSTRUCTIONS

Careful attention is devoted to quality standards in the manufacturing of your **CD7400 & CD7400B**, and safety is a major factor in its design. However, safety is also your responsibility. This section lists important information that will help you properly use and enjoy your **CD7400 & CD7400B** and accessories. Read all the included safety and operating instruction before using your **CD7400 & CD7400B** follow them closely, and retain them for future reference.

Heed Warnings:

Follow all warnings on the product and in the operating instructions.

Cleaning:

Unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Do not use liquid or aerosol cleaners.

Attachments:

Do not use attachments accessories not recommended by the product manufacturer, as they might create a hazard.

Water and Moisture:

Do not use this product near water (for example, near a bathtub, washbowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool).

Caution:

Do not place this product on an unstable stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product.

Ventilation:

Slots and openings in the cabinet provide ventilation, ensure reliable operation, and protect from overheating. Do not block or cover these opening, and do not place the product on a bed, sofa, rug, or other similar surface. Do not place the product in a built-in installation such as a bookcase or rack unless it provides proper ventilation.

Power Sources:

Operate this product using only the power source indicated on its marking label. If you are not sure of your home's power type, consult your product dealer or local power company.

Power Cord Protection:

Route power cords so they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

Non-use Periods:

Unplug the product's power cord when you will not use it for extended periods.

Lightning:

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power surges.

Overloading:

Do not overload wall outlets, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.

Object and Liquids:

Never push objects of any kind into this product through openings, as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

Servicing:

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards.

Refer all servicing to qualified service personnel.

Damage Requiring Service:

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- **When the power cord or plug is damaged.**
- **If liquid has been spilled on, or objects have fallen into the product.**
- **If the product has been exposed to rain or water.**
- **If the product does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.**
- **If the product has been dropped or damaged in any way.**
- **When the product exhibits a distinct change in performance.**
- **Please refer to the product warranty card (included).**

Replacement parts:

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or having the same characteristics as the original part.

Unauthorized substitutions may result in fire, electric shock, or other hazards.

Safety Check:

Upon completion of service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

Heat:

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.


Connection:

Make sure before start connecting the unit to any extras, the power cord must be disconnected from the **A/C 240** Volts power outlet. **This avoiding: electric shock, or other hazards.**

Laser:

Do not open, CD lid or remove the cabinet cover. Expose to laser may cause damage to eyesight.

LOCATION OF CONTROLS

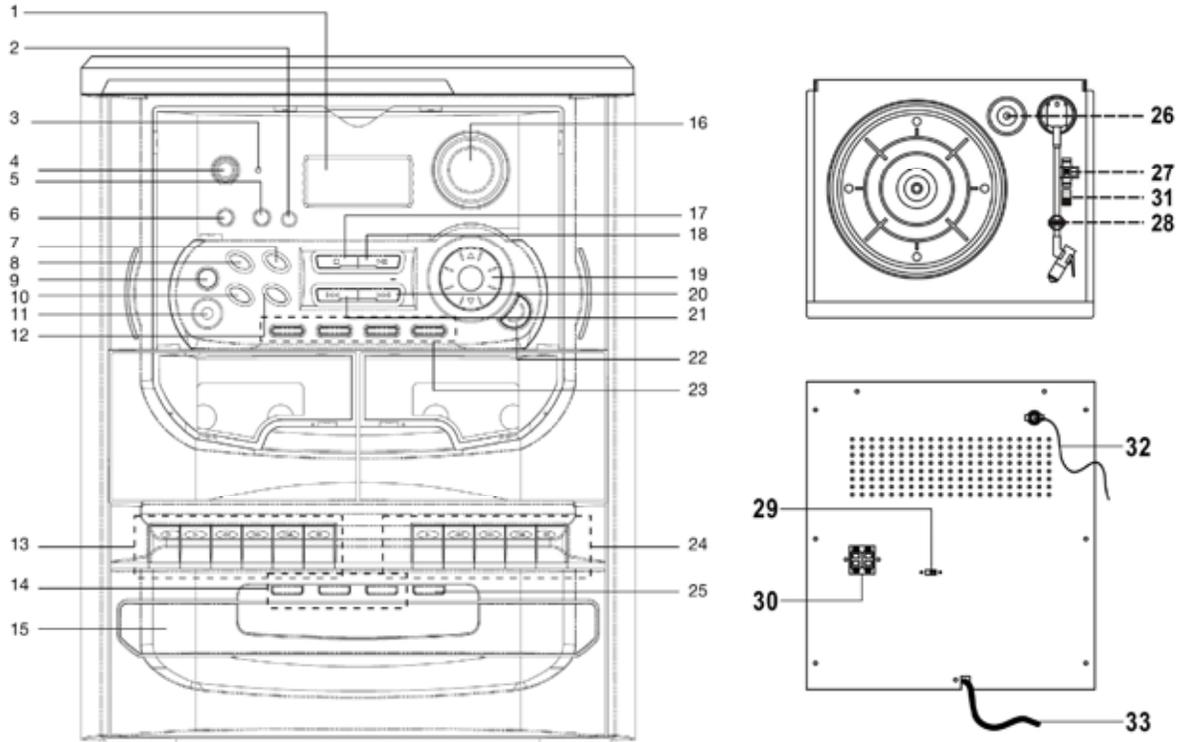

- | | |
|--|--|
| <ul style="list-style-type: none"> 1) LCD DISPLAY 2) REMOTE SENSOR 3) STANDBY LED INDICATOR 4) POWER BUTTON 5) MUTE BUTTON 6) FM MODE / DUBBING SPEED SELECTOR 7) MEMEORY / CLOCK ADJUST BUTTON 8) SLEEP / TIMER BUTTON 9) DISC CHANGE BUTTON 10) RANDOM / M-DN BUTTON 11) HEADPHONE JACK 12) REPEAT / M-UP BUTTON 13) DECK 1 CONTROL KEY ● RECORD KEY ▶ PLAYBACK KEY ◀◀ REWIND KEY ▶▶ FAST FORWARD KEY ■▲ STO/EJECT KEY PAUSE KEY | <ul style="list-style-type: none"> 14) DISC 1,2,3 SELECTOR 15) CD DOOR 16) PRE-SET EQ BUTTON 17) CD STOP BUTTON 18) CD PLAY / PAUSE BUTTON 19) VOLUM UP-DOWN BUTTON 20) SKIP / SEARCH / TUNING UP BUTTON 21) SKIP / SEARCH / TUNING DOWN BUTTON 22) EXTRA BASS CONTROL BUTTON 23) FUNCTION KNOBS 24) DECK 2 CONTROL KEYS 25) CD DOOR OPEN/CLOSE BUTTON 26) SPINDLE ADAPTOR 27) 33/45/78 RPM SPEED SELECTOR 28) PICK-UP HOLDER 29) FM MODE / BEAT CUT 1-2 SELECTOR 30) SPEAKER WIRE TERMINAL 31) AUTO STOP SWITCH 32) FM WIRE ANTENNA 33) AC POWER CORD |
|--|--|

CAUTION:

USAGE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. THIS UNIT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT QUALIFIED SERVICE PERSONNEL.

IMPORTANT:

SINCE MOVEMENT OF THE CD MECHANISM AND THE SENSITIVE CIRCUITY MAY CAUSE INTERFERENCE TO THE RADIO TUNER NEARBY, SWITCH THIS UNIT OFF WHILE OPERATING OTHER RADIO DEVICES.

PRECAUTIONS FOR USE

INSTALLATION

- UNPACK ALL PARTS AND REMOVE PROTECTIVE MATERIAL.
- DO NOT CONNECT THE UNIT TO THE MAINS BEFORE CHECKING THE MAINS VOLTAGE AND BEFORE ALL OTHER CONNECTIONS HAVE BEEN MADE.
- DO NOT COVER ANY VENTS AND MAKE SURE THAT THERE IS A SPACE OF SEVERAL CENTIMETERS AROUND THE UNIT FOR VENTILATION.

CONNECTION

1. CONNECT THE POWER CORD TO AC OUTLET.
2. WHEN YOU FIRST PLUG THE UNIT INTO THE MAINS, THE UNIT WILL GO INTO STANDBY MODE.
3. CONNECT THE SPEAKER WIRE TO THE SPEAKER TERMINAL LOCATED ON THE REAR SIDE OF THE UNIT.
4. TURN ON THE POWER AND SELECT " CD " FUNCTION. IF THE LCD DISPLAY IS ON WITH BACKLIGHTING, IT MEANS THE POWER SUPPLY IS NORMAL. NOW YOUR SYSTEM IS READY TO PLAY THE MUSIC.

SETTING THE CLOCK

1. SET UNIT IN STANDBY MODE.
2. PRESS THE "MEM/CLK-ADJ" BUTTON, THE FIRST SECOND DIGIT OF "00" IS FLASHING. PRESS **⏪** OR **⏩** BUTTON TO SET THE CORRECT HOUR. PRESS "MEM/CLK-ADJ" BUTTON TO STORE THE CORRECT HOUR.
3. THE THIRD & FOURTH DIGIT OF "00" IS FLASHING, PRESS THE **⏪** OR **⏩** BUTTON TO SET THE CORRECT MINUTES. PRESS "MEM/CLK-ADJ" TO STORE THE CORRECT MINUTE.
4. TO SELECT 12/24-HOUR DISPLAY MODE, HOLD THE " STOP " BUTTON REPEATEDLY TO CHANGE MODE.



LISTENING TO RADIO

MANUAL TUNING

1. PRESS "TUNER/BAND" BUTTON AND SELECT THE DESIRED BAND (AM OR FM).
2. TUNE TO THE REQUIRED STATION BY PRESSING THE TUNING "+" OR "-" BUTTON.
3. ADJUST VOLUME CONTROLS TO THE DESIRED VOLUME LEVEL.

AUTO TUNING

1. PRESS "TUNER/BAND" BUTTON AND SELECT THE DESIRED BAND (AM OR FM).
2. PRESS AND HOLD THE TUNING "+" OR "-" BUTTON FOR 1-2 SECONDS AND THEN RELEASE
3. THE UNIT WILL START SEEKING AUTOMATICALLY AND STOP UNTIL A RADIO STATION IS REACHED.
4. REPEAT STEP 3 & 4 UNTIL THE DESIRED RADIO STATION IS BEING REACHED.
5. ADJUST VOLUME CONTROLS TO THE DESIRED VOLUME LEVEL.

PRESET STATIONS

YOU CAN STORE UP TO TOTAL OF 20 RADIO STATIONS IN THE MEMORY.

1. SET TO RADIO MODE
2. TURN TO THE DESIRED RADIO STATION BY " MANUAL " OR " AUTO " TUNING METHOD.
3. PRESS "MEM/CLK-ADJ" BUTTON TO ENABLE PROGRAM STATE.
4. PRESS "REPEAT/M-UP" BUTTON TO SELECT THE DESIRED STATION MEMORY FOR STORAGE.
5. PRESS "MEM/CLK-ADJ" BUTTON AGAIN TO CONFIRM THE SETTING.
6. REPEAT STEP 2 TO 5 TO STORE OTHER STATIONS.
7. PRESS "M-UP" OR "M-DN" BUTTON TO SELECT THE PRESET STATIONS IN ORDER.
8. TO RETURN NORMAL TUNER MODE, LEAVE KEYS FREE.

- THERE ARE 5 SECONDS FOR PROGRAM STATE, AFTER 5 SEC. THIS STATE WOULD RELEASE TO NORMAL TUNER MODE AUTOMATICALLY.
- YOU CAN OVERWRITE A PRESENT STATION BY STORING ANOTHER FREQUENCY IN ITS PLACE.

FM & FM-STEREO RECEPTION

- SET THE FM MODE SELECTOR AT "MONO" POSITION. PROGRAMS ARE RECEIVED IN MONO MODE. IN PARTICULAR WHEN STEREO SIGNALS ARE WEAK. IT IS PREFERABLE TO RECEIVE THE PROGRAM IN MONO.
- SET THE FM MODE SELECTOR AT "ST" POSITION FOR RECEIVING STEREO PROGRAMS. THE "ST" INDICATOR WILL APPEAR ON LCD TO SHOW FM STEREO PROGRAM IS RECEIVING.


HINTS FOR BEST RECEPTION:-

- AM/LW : THE RECEIVER HAS A BUILT-IN MW/LW BAR ANTENNA. IF AM/LW RECEPTION IS WEAK, SLIGHT ROTATE OR RE-POSITIONING OF THE UNIT WILL USUALLY IMPROVE THE AM/LW RECEPTION.
- FM : THE RECEIVER HAS A BUILT-IN FM WIRE ANTENNA HANGING AT THE REAR CABINET. THIS WIRE SHOULD BE TOTALLY UNRAVELED AND EXTENDED FOR BEST RECEPTION.


PHONO

NOTED:

- REMOVE THE STYLUS PROTECTOR.
- BE SURE THAT THE TONE ARM IS BEING DETACHED FROM THE TONE ARM REST BEFORE OPERATING, AND RE-SECURED AGAIN AFTERWARDS.

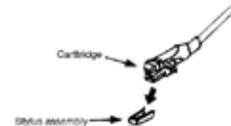

1. PRESS THE " PHONO " FUNCTION SWITCH.
2. SET THE SPEED SELECTOR TO THE PROPER POSITION DEPENDING ON THE RECORD TO BE PLAYED.
3. PLACE THE RECORD ON THE PLATTER (USE THE SPINDLE ADAPTOR IF REQUIRED).
4. LIFT THE TONE ARM FROM THE REST AND SLOWLY MOVE IT TO THE RECORD SIDE. THE PLATTER WILL BEING TO ROTATE.
5. PLACE THE TONE ARM TO THE DESIRED POSITION OF THE RECORD.
6. ADJUST THE VOLUME TO THE DESIRED LEVEL.
7. AT THE END OF RECORD, THE PLATTER WILL AUTOMATICALLY STOP ROTATING. LIFT THE TONE ARM FROM THE RECORD AND RETURN IT TO THE REST.
8. TO STOP MANUALLY, LIFT THE TONE ARM FROM THE RECORD AND RETURN IT TO THE REST.

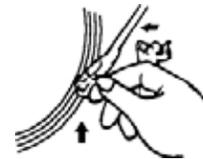

REMARK : AS SOME KIND OF RECORD THE AUTO-STOP AREA WAS OUT OF THE UNIT SETTING, SO IT WILL STOP BEFORE THE LAST RACK FINISH. IN THIS CASE, SELECT THE AUTO-STOP SWITCH TO " OFF " POSITION, THEN IT WILL RUN TO THE END OF THE RECORD BUT WILL NOT STOP AUTOMATICALLY (TURN OFF THE UNIT BY POWER BUTTON OR SWITCH BACK THE AUTO-STOP SWITCH TO " ON " POSITION TO STOP THE PLATTER ROTATE). THEN PUT BACK THE TONE ARM TO THE REST POSITION.

PLAYING COMPACT DISC

● GETTING STARTED

1. PRESS "CD" BUTTON.
2. PRESS "OPEN/CLOSE" BUTTON TO OPEN THE CD DOOR.
3. PLACE A CD WITH THE PRINTED SIDE FACING UP INSIDE THE TRAY.
4. PRESS THE "  " OR " DISC-CH " BUTTON TO TURN THE CD TRAY, AND LOAD OTHER DISCS.
5. PRESS THE "OPEN/CLOSE" BUTTON TO CLOSE THE CD DOOR.
6. CD SEARCH IS PERFORMING, THE DISPLAY WILL SHOW THE TOTAL NUMBER OF DISC, NUMBER OF TRACKS & PLAYING TIME OF DISC.

NOTE : CD SEARCHING WILL BE PERFORMED EVERYTIME WHEN SWITCHING TO CD MODE OR CLOSING THE CD DOOR. ALL CD FUNCTIONS WILL BE RESPONDED ONLY AFTER THE CD SEARCHING IS COMPLETED.

● PLAY / PAUSE MODE

1. PRESS THE "PLAY/PAUSE" BUTTON TO START PLAYBACK, THE FIRST TRACK OF THE FIRST DISC WILL BE PLAYED AND THE PLAY INDICATOR WILL APPEAR ON THE LCD DISPLAY.
2. OR PRESS EITHER THE " DISC 1 " , " DISC 2 " , " DISC 3 " BUTTON, UNIT WILL PLAY THE DISC INSIDE THE DESIRED TRAY DIRECTLY. IT WILL ONLY PLAY THAT DISC AND STOP PLAYBACK AT THE END OF THAT DISC.
3. TO PAUSE, PRESS THE "PLAY/PAUSE" BUTTON ONCE, AND THE DISPLAY WILL START FLASHING. PRESS AGAIN TO RELEASE & RESUME PLAYBACK.

If you wish to play all discs inside the unit, press the PLAY button after inserting all 3 discs, it will play all 3 discs in sequence.

Note: If you press the button " Disc 1 " or " Disc 2 " or " Disc 3 " (located near the CD tray at the bottom of the unit or on the remote control, it will play only that particular disc. The words ONE DISC will be on the screen, which means only one disc will play.

The  button can be pressed if you wish to change to a different disc. The words ALL DISC will remain on the screen. This means that all discs will be played. EN-5

● **STOP MODE** ■

1. IF "STOP" BUTTON IS PRESSED DURING PLAY OR PAUSE MODE, SYSTEM WILL GO TO STOP MODE.

● **SKIP MODE (SKIP UP▶▶/SKIP DOWN◀◀)**


1. DURING PLAY OR PAUSE MODE, IF " SKIP + " BUTTON IS PRESSED IT WILL GO TO NEXT TRACK AND DISPLAY THE TRACK NO. AND THEN REMAIN THE PLAY OR PAUSE MODE.
2. DURING PLAY OR PAUSE MODE, IF " SKIP - " BUTTON IS PRESSED. IT WILL GO BACK TO THE BEGINNING OF THE TRACK, ORIGINAL TRACK NO. IS DISPLAY AND REMAIN THE PLAY OR PAUSE MODE.
3. AFTER STEP 2, PRESS " SKIP - " BUTTON AGAIN WILL GO TO THE PREVIOUS TRACK AND REMAIN THE PLAY OR PAUSE MODE.

● **SEARCH MODE (SEARCH UP▶▶▶/SEARCH DOWN◀◀◀)**

1. DURING PLAY MODE, IF " SEARCH + " BUTTON IS PRESSED & HOLD FOR FEW SECONDS, IT WILL START SEARCHING FORWARD.
2. DURING PLAY MODE, IF " SEARCH - " BUTTON IS PRESSED & HOLD FOR FEW SECONDS. IT WILL STAR SEARCHING BACKWARDS.

● **REPEAT PLAY**

THIS FUNCTION ALLOW TO REPEAT 1 SINGLE TRACK, 1 SINGLE DISC OR ALL DISCS:-
PRESS THE " REPEAT " KEYS REPEATEDLY TO SWITCH THE FUNCTION:-

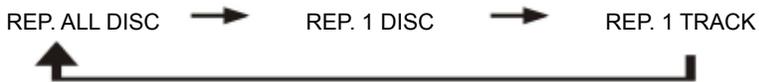

NOTE : SINGLE TRACK REPEAT FUNCTION IS POSSIBLE IN NORMAL OR PROGRAMMED PLAYBACK, REPEAT ONE DISC OR ALL DISCS IS ONLY AVAILABLE IN NORMAL PLAYBACK.

● **RANDOM PLAY**

YOU CAN LISTEN TO ALL THE TACKS OF ALL AVAIALBLE DISCS IN A RANDOM ORDER BY THIS FUNCTION

1. PRESS THE "RANDOM" BUTTON ONCE, UNIT WILL PLAY ALL DISCS RANDOMLY ; PRESS IT AGAIN, UNIT WILL PLAY 1 DISC RANDOMLY.
2. PRESS "PLAY/PAUSE" BUTTON TO START RANDOM PLAYBACK.
3. ALL TRACKS OF ALL DISCS OR ALL TRACKS OF 1 DISC WILL BE STARTED PLAYBACK IN RANDOM ORDER.
4. PRESS "RANDOM" BUTTON AGAIN TO CANCEL RANDOM MODE.
If 3 disc are inserted and the total songs is 30 tracks (for example), the unit will playback all 30 songs and then stop.

CD PROGRAMMING

UP TO 60 TACKS CAN BE PROGRAMMED TO BE PLAYED IN ANY REQUIRED ORDER FROM ONE CD OR ALL CDs IN THE CD CHANGER.

1. SET IN CD MODE.
2. PRESS THE MEM/CLK-ADJ. BUTTON
3. PRESS THE "  " TO SELECT THE DESIRED DISC.
4. PRESS SKIP◀◀ OR ▶▶ BUTTON TO SELECT THE DESIRED TRACK.
5. PRESS THE " MEM/CLK/ADJ. " BUTTON AGAIN TO STORE THE TRACK IN MEMORY.
6. REPEAT STEPS 2 TO 4 TO ENTER ADDITIONAL PROGRAM
7. PRESS PLAY/PAUSE BUTTON TO START PLAYBACK IN ORDER.
8. PRESS "STOP/BAND" BUTTON TO STOP PLAYBACK AND PRESS AGAIN TO CLEAR ALL PROGRAMMED TRACKS.

TAPE DECK

GENERAL OPERATION

STOP / EJECT KEY PRESS TO STOP ALL DECK OPERATION. PRESS AGAIN TO OPEN THE CASSETTE DOOR.

FAST FORWARD KEY & FAST REWIND KEY PRESS TO START RAPID TAPE WINDING IN EITHER FORWARD OR REVERS DIRECTION. PRESS STOP / FAST REWIND KEY EJECT KEYS WHEN THE CASSETTE SPOOLS STOP TURNING.

PLAY KEY	PRESS TO START PLAYING TAPE.
PAUSE KEY	PRESS TO STOP TAPE OPERATION TEMPORARILY. PRESS AGAIN TO RESUME PLAY.
RECORD KEY (DECK 1 ONLY)	PRESS TOGETHER WITH PLAY KEY TO START TAPE RECORDING.

PLAYBACK

- PRESS "TAPE" BUTTON TO ACTIVE TAPE FUNCTION
- PUT IN THE CASSETTE TAPE.
- PRESS PLAY KEY TO ACTIVE PLAYBACK
- ADJUST THE VOLUME CONTROL TO THE DESIRED LEVEL.
- USE PAUSE KEY WHEN YOU WANT TO STOP PLAYBACK TEMPORARILY.
- PRESS STOP / EJECT KEY WHEN FINISHED.

RECORDING

A. RECORDING FROM TAPE (DECK 2 TO DECK 1)

THIS UNIT ENABLES YOU TO DUPLICATE A PRE-RECORDED TAPE TO ANOTHER TAPE. IT IS PERFORMED ONLY ONE WAY FROM DECK 2 (PLAYBAK) TO DECK 1 (RECORDING).

DUBBING AT NORMAL SPEED

- PRESS THE " TAPE " FUNCTION BUTTON.
- INSET A PRE-RECORDED CASSETTE INTO DECK 2 AND A BLANK CASSETTE TAPE INTO DECK 1.
- PRESS THE " PAUSE " KEY AND THEN PRESS THE " RECORD " AND " PLAY " KEY AT DECK 1.
- PRESS THE " PLAY " KEY TO START PLAYBACK AT DECK 2 & THEN PRESS " PAUSE " KEY AT DECK 1 TO START DUBBING.
- PRESS " PAUSE " KEY AT DECK 1 & " STOP " KEY AT DECK 2 WHEN FINISH.

DUBBING AT HIGH SPEED

THIS UNIT IS QUIPPED WITH A HIGH SPEED DUBBING SYSTEM WHICH CAN SAVE THE TIME FOR DUBBING BY 2/3 WHEN COMPARE TO NORMAL SPEED.

- PRESS THE DUBBING BUTTON TO " HI " POSITION AND THEN FOLLOW THE SAME PROCEDURES AS STIPULATED IN "DUBBING AT NORMAL SPEED".
- WHEN DUBBING A PRE-RECORDED CASSETTE TAPE AT HIGH SPEED, A CHATTERING SOUND IS BEING HEARD. TO AVOID THIS, SET THE VOLUME CONTROL TO A MINIMUM LEVEL.
- DO NO ACTIVE/DE-ACTIVE THE "HI-NOR. DUBBING" BUTTON DURING DUBBING, THIS WILL VARY THE SPEED OF RECORDING AND MAY BE DAMAGE THE CASSETTE TAPE.

B. RECORDING FROM RADIO

- PRESS "RADIO" BUTTON TO ACTIVE RADIO MODE
- TUNE TO THE DESIRED STATION AND INSERT A BLANK CASSETTE TAPE IN DECK 1.
- PRESS "RECORD" & "PLAY" KEY TO START RECORDING.
- PRESS "PAUSE" KEYS AND THEN "STOP/EJECT" KEY WHEN FINISH.

➤ DURING RECORDING OF AM, BEATING WHISTLE AT SOME RECEPTION STATIONS MAY HAPPEN, BY SELECTING "BEAT CUT 1-2" SWITCH MAY HELP TO REDUCE THE BACKGROUND NOISE.

C. RECORDING FROM CD

- PRESS THE "CD" FUNCTION BUTTON.
- INSERT A BLACK CASSETTE TAPE IN DECK 1 WHICH SUITABLE FOR RECORDING.
- PRESS "PAUSE" KEY FIRST AND THEN "RECORD" & "PLAY" KEY AT CASSETTE. RECORDING FUNCTION IS NOW ON STAND BY.
- ACTIVATE THE CD PLAYER, AND THEN PRESS "PAUSE KEY" AT CASSETTE TO START RECORDING.
- TO STOP RECORDING, PRESS "STOP" BUTTON ON CD PLAYER FIRST, THEN PRESS THE "PAUSE" KEY AND THEN "STOP/EJECT" KEY ON CASSETTE TAPE DECK.

D. RECORDING FROM TURNTABLE

- PRESS "PHONO" BUTTON TO ACTIVE TURNTABLE MODE
- INSERT A BLANK CASSETTE TAPE IN DECK 1.
- PRESS "RECORD" & "PLAY" KEY TO START RECORDING.
- SELECT THE DESIRE RECORD AND START PLAYBACK
- PRESS "PAUSE" KEYS AND THEN "STOP/EJECT" KEY WHEN FINISH.


REMOTE CONTROL TRANSMITTER

CONTROL FUNCTIONS

BATTERY INSTALLATION: (Battery not Supplied)

INSERT BATTERIES INTO THE REMOTE CONTROL BATTERY COMPARTMENT FOLLOWING THE POLARITY (+ -) INDICATED. THE REMOTE CONTROL REQUIRE 2 X 1,5 "AAA" BATTERY FOR OPERATION (WE RECOMMEND TO USE A GOOD BRAND ALKALINE BATTERIES)

BUTTON DESCRIPTION

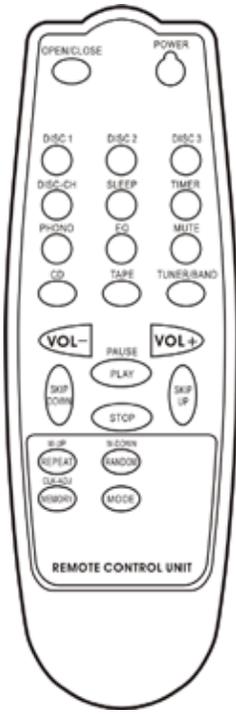OPEN/CLOSE	PRESS TO OPEN & CLOSE THE CD DOOR	
POWER	PRESS TO SWITCH THE SYSTEM INTO STANDBY MODE	
DISC 1,2,3	PRESS TO SELECT THE DISC FOR PLAYBACK DIRECTLY	
DISC-CH	PRESS TO SELECT THE NEXT DESIRE DISC AND ROTATE THE DISC TRAY	
SLEEP	PRESS TO ACTIVE SLEEP FUNCTION	
TIMER	PRESS TO SET THE ALARM MODE ON/OFF	
PHONO	PRESS TO ACTIVE PHONO MODE	
EQ	PRESS TO SELECT EQ MODE	
MUTE	PRESS TO ACTIVE MUTE FUNCTION	
CD	PRESS TO ACTIVE CD MODE	
TAPE	PRESS TO ACTIVE TAPE MODE	
TUNER/BAND	PRESS TO ACTIVE TUNER MODE AND SELECT RADIO BAND	
VOLUME -/+	CONTROL VOLUME UP DOWN	
SKIP UP/DOWN	IN CD MODE : TO SELECT PREVIOUS / NEXT CD TRACK IN TUNER MODE : PRESS TO STEP UP/DOWN OF FREQUENCY	
PLAY/PAUSE ►	IN CD MODE, PRESS ONCE TO START PLAYBACK. PRESS ONCE AGAIN TO STOP THE DISC PLAY TEMPORARILY	
STOP ■	IN CD MODE, PRESS TO TERMINATE CD PLAYBACK IN TUNER MODE, PRESS TO SELECT THE RADIO BAND	
REPEAT/M-UP	IN CD MODE : PRESS TO ACTIVE THE REPEAT FUNCTION IN TUNER MODE : PRESS TO CALL OUT THE PRESET MEMORY IN ORDER	
RANDOM/M-DOWN	IN CD MODE : PRESS TO ACTIVE THE RANDOM PLAYBACK FOR CD MODE IN TUNER MODE : PRESS TO CALL OUT THE PRESET MEMORY IN BACK	
MEMORY/CLK-ADJ	IN STANDBY MODE, FOR CLOCK SETTING IN TUNER MODE, FOR PRE-SETTING OF RADIO STATION INTO MEMORY	
MODE	TO REVIEW AND SET THE ALARAM ON/OFF TIME	

LENOXX

www.lenoxx.com.au

 1300 666 848

 LenoxxElectronics

 LenoxxElectronics

 @LenoxxAustralia