

LENOXX
CV902 / PV605

RECHARGEABLE 150W CORDLESS MULTIVAC

with turbo brush



Model: CV902 /PV605

Batch: PR4136

PRODUCT SAFETY

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Check that the voltage of the main circuit corresponds with the rating of the charger before operating.
- If the charger or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- Do not let the chargers cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- Do not carry the appliance by the charger cord.
- Do not use any extension cord with the charger.
- Switch off the appliance before fitting or removing tools/ attachments, after use and before cleaning.
- Do not immerse the charger, it's plug or any part of the appliance in water or other liquid.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above as well as persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children without supervision.
- Close supervision is necessary when any appliance is used by or near children.
- Take care when this appliance is used near pets.
- This appliance is for household use only.
- Do not use the appliance outdoors.
- Use extra care when cleaning on stairs.

- Keep hair, loose clothing, fingers, feet and all parts of body away from moving parts.
- Do not vacuum liquids or sharp objects like nails or drawing pins.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the service department.

TECHNICAL DATA

BatteryCharger:

Input: 100-240V~50/60Hz 0.4A Max

Output: DC 27V 400mA

Battery: 22.2V 2000mAh

Product Rating: 150W

Up to 25 minutes run time



WHAT'S IN THE BOX

- Instruction Manual
- Rechargeable Battery
- Charger

- 1) Suction Pipe
- 2) Release Button
- 3) Power Button
- 4) Handle
- 5) Charging Socket
- 6) Rechargeable Battery
- 7) Dust Cup Cover
- 8) Dust Cup
- 9) Filter System



BEFORE FIRST USE:

1. Remove the product from the box.
2. Remove any packaging from the product.
3. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.
4. Charge the rechargeable battery.

Dispose of the packaging in a responsible manner.

USING THIS APPLIANCE

Accessories






1. Assemble the nozzle and tube.
2. Pull out the mains cable to its full length and plug into the mains supply.
3. Switch on by pressing the On/Off switch button.
4. Your appliance is now ready for normal use.

CHARGING

A full charge takes approximately 4.5 hours.

1. To charge the vacuum, ensure the rechargeable battery is fitted to the vacuum.
2. Connect the end of the chargers lead to the charging port on the vacuum.
3. Plug the charger in at the mains.
4. When the battery is charging, the indicator light will be red.
5. When the battery is fully charged, the indicator light will be green.

Accessories (depending on model)

Accessory	Use
<p>Main connector</p> 	<p>Put the thicker end of the main connector into the silver suction pipe. If the connector feels loose, you may need to insert the other end. The main connector is all you need to connect to the extension pipe or any other accessories.</p>
<p>Floor brush</p> 	<p>The floor brush can be attached to either the extension pipe or the main connector, and can be used to clean carpets and floors.</p>
<p>Extension pipe</p> 	<p>There is one extension pipe included. The floor brush can directly attach to the extension pipe. To attach the other accessories, first attach the main connector to the extension pipe.</p>
<p>Crevice tool</p> 	<p>The crevice tool can be connected to the extension pipe or the main connector and can be used to clean in tight areas such as corners and under units.</p>
<p>Dusting brush</p> 	<p>This rechargeable vacuum comes with a dusting brush. The dusting brush can be attached to the main connector of the extension pipe and used to clean window blinds, lampshades, mirrors and other areas that require delicate cleaning.</p>

ATTACHING THE TOOLS TO THE MAIN BODY

1. Push the main connector into the suction pipe opening or connect the extension pipe.
2. Push the required tool into the other end of the main connector.
3. When using the extension pipe ensure the end attachment is fitted securely. When connecting the extension pipe to the suction pipe or the floor brush, ensure all tabs are aligned.

POWER BUTTON

1. Once the required accessories have been attached, the vacuum is ready for use.
2. The power button is located on the bottom of the handle.
3. Push and hold the power button to use.

CLEANING AND CARE

CLEANING THE DUST CUP & FILTERS

In order to achieve the best performance, empty the dust cup container and clean the dust cup filter after each use.

1. Turn off the vacuum cleaner.
2. Hold the vacuum over the bin or bin bag. With one hand holding the handle, unclip the dust cup cover to open.
3. The dust cup cover will pop open and the dust and debris will empty into the bin.
4. To remove the filters, turn the filter handle anti-clockwise.
5. Remove the inner filter from the outer filter and rinse both in warm water. Let the filter air dry for 24 hours before re-assembling.
6. Ensure you remove all dust and debris from both filters. A soft bristled brush can be used to remove any blocked dirt from the outer filter.
7. Re-assemble when completely dry.

WARNING:
DO NOT IMMERSE ANY PART OF
THE APPLIANCE IN WATER



TROUBLESHOOTING

Problem	Possible solution
The vacuum does not work	The vacuum's battery may be flat. Charge fully.
Vacuum does not pick up or suction power is weak	The dust cup container may be full or the filter may require cleaning. Empty the dust container and clean the filter.
Dust is escaping from the vacuum	The filter may not be installed correctly or the dust container may be full. Empty the dust container and reassemble the filter system.

WARRANTY

The warranty will be void if;

- The defect in the machine was caused by inappropriate use, over-loading or used in any way other than the appropriate operation methods described in this manual.
- If there has been any technical interference, modification or service done by an unauthorized service person.
- If the item has been opened by the customer.
- If the item has been dropped.
- If no proof of purchase can be produced at the time of the claim.

The illustrations used in the manual are to illustrate the operation method and product structure of the product. Where there is a small difference between the physical item, and the illustrations, please take the physical as the standard.

LENOXX

www.lenoxx.com.au

 1300 666 848

 LenoxxElectronics

 LenoxxElectronics

 @LenoxxAustralia

