

LENOXX

LF180

ELECTRIC FIREPLACE HEATER



Model no: LF180

Batch no: PR4287

This appliance is intended for household use only.

Please read and retain these instructions for future reference.

The illustrations used in the manual are to illustrate the operation method structure of the product. Where there is a small difference between the physical item and the illustrations, please take the physical as the standard.



GENERAL SAFETY INFORMATION:

When using this fireplace, basic precautions should always be taken to reduce the risk of fire, electric shock and injury to persons, including the following:

CAUTION – Due to the high temperature, keep electrical cords, drapery and other furnishings at least 3 feet from the front, side and rear of the fireplace.

CAUTION - HOT! The heater is hot when it is in use. To avoid burns, do not let bare skin touch hot surfaces.

1. Carefully read all instructions before using the fireplace and retain for future reference.
2. Remove the unit from its packaging and check to make sure it is in good condition before use.
3. Do not let children play with any parts of the packing (such as plastic bags, etc.).
4. Check the household voltage to ensure that it matches the fireplace's rated specification.
5. Before using the fireplace, carefully check the power cord and plug for any damage.
6. Ensure that the room is equipped with a working smoke detector.
7. Before unplugging the power cord, turn off the power. When touching the unit, keep your hands dry to prevent electric shock.
8. Do not place the fireplace near curtains or other inflammable objects. Keep combustible materials, such as pillows, bedding, papers, clothes, and curtains at least 1 meter away from the front, side and rear of the fireplace.
9. Ensure the unit is not blocked and there is spacing of at least 50cm around its sides and at least 120 cm from the front.
10. Do not block air intakes or exhaust in any manner to prevent fire.
11. Use on a flat surface only.
12. Do not use on soft or uneven surfaces, like a bed, where openings may become blocked.
13. Do not place the heater on long pile carpet or rugs.
14. Ensure the heater is placed on a level surface with enough clearance from its surroundings.
15. Exhibit extreme caution when any fireplace is in the vicinity of children and infants.
16. Never leave children or infants unattended while the fireplace is on or plugged in.
17. When not in use, switch off and always unplug the fireplace.

18. Prevent water from entering the housing of the fireplace during operation or while in storage.
19. Always store the fireplace in a dry area free from any moisture. This fireplace is not intended for use in bathrooms, laundry areas, or similar indoor locations. Never place the fireplace where it may fall into a bath tub or get exposed to water in any way.
20. Do not use in places where gasoline, paint, or other flammable liquids are used or stored. Do not use when flammable sprays, solvents or glues are in use.
21. Do not run the cord under carpets. Do not cover the cord with throw rugs, runners, or similar products. Arrange the cord away from traffic areas such that it will not be tripped over by anyone.
22. Do not operate any fireplace with a damaged cord, a damaged plug, after the fireplace malfunctions, or if it has been dropped or damaged in any manner. Return the fireplace to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
23. Do not insert fingers or allow foreign objects to enter any ventilation or exhaust opening as this may lead to an electric shock or fire, or may even damage the fireplace.
24. This fireplace becomes hot during use. To avoid burns, do not let bare skin touch hot surfaces. If necessary, use the handles when moving this fireplace.
25. Use this fireplace only as described in this manual. Any other uses not recommended by the manufacturer may cause fire, electric shock, or personal injury and may void warranty privileges.
26. Always plug fireplaces directly into a wall outlet. Never use an extension cord, power strip, surge protector, multiple outlet adapter, cord reel or outlet-type air freshener. The use of such devices creates a fire hazard.
27. Ensure the heater is not directly located under the wall outlet.
28. Faulty wall outlet connections may cause the wall outlet to overheat. Be sure that the fireplace plug properly fits into the outlet before each use. During use, make sure the fireplace plug does not overheat. If necessary, have a qualified electrician check and / or replace the wall outlet.
29. Do not place the fireplace near a bed for objects such as pillows or blankets can fall off the bed and be ignited by the fireplace.
30. Do not immerse in water.
31. Never clean this fireplace while it is plugged in. To disconnect, turn control to OFF, then remove the plug from the outlet. Never pull the cord. Always hold the plug firmly and then remove from the outlet.
32. This fireplace is intended for supplemental heat and / or decorative purposes. Continuous use for several hours can impact the performance and life of the fireplace.
33. It is not intended to be used in commercial, industrial or agricultural settings.
34. Do not use outdoors.
35. Do not use the heater with a timer or separate remote-control system.
36. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Close supervision is necessary when the product is used by or near children or invalids. Children should be supervised to ensure that they do not play with the appliance.

37. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments

38. Do not leave the heater running unattended.

39. Always disconnect the unit when moving it from one location to another.

40. The unit does not contain any serviceable parts inside. Do not attempt to open and repair the unit yourself. All components should only be serviced by a qualified technician.

41. Do not use the heater if the plug, power cable or heater itself is damaged.

42. If the power cord is damaged, you must have it replaced at a service centre with qualified persons in order to avoid a hazard.

43. Tip over switch. There is a tip over switch inside the heater. If the heater is knocked over the power will be cut off automatically.

Getting Started:

- Remove the fireplace from the box.
- Remove the packaging. Place it inside the box or safely dispose elsewhere.

Package Contents:

- Electric Fireplace
- 4 x feet, 12 x screws
- Instruction Manual

Features:

- Contemporary & portable design
- Dual heat settings (900 Watts/ 1800 Watts)
- Realistic wooden log flame effect
- Flames operate with & without heat
- Adjustable flame brightness
- Built-in overheating protection, auto safety shut-off
- Cool touch housing
- Tip over switch. There is a tip over switch inside the heater. If the heater is knocked over the power will be cut off automatically.

Quick Reference Guide:


- Prior to installation, please ensure that the voltage and capacity of your power outlet is compatible with your fireplace.
- Your fireplace may emit a slight, harmless odour during its first use. This odour is a normal reaction caused by the initial heating of internal fireplace parts and it will not occur again.
- It is normal for fireplace to make a rattling sound for a short duration of time during its first use.
- If your fireplace does not emit heat, please ensure the fireplace switch is on. For further information, please refer to the Troubleshooting section of this manual.

Helpful Advice before Installation:

- Please retain all packaging until all the parts and other package contents are accounted for.
- It is recommended to place your fireplace near an existing wall outlet for ease of electric connection.
- Store your fireplace in a dry, safe and dust-free place while drilling during fireplace installation.
- Do not attempt to wire new outlets or circuits. To reduce the risk of fire, electric shock or injury to persons, always have a licensed electrician perform maintenance and repairs.


Before Use:

Before using the heater, the feet (supplied separately in the carton), must be fitted to the unit. These are to be attached to the base of the heater using the screws provided and with the aid of a Phillips head hand screwdriver (Not supplied),taking care to ensure that they are located correctly and that holes in plastic feet align with the pilot holes in base of the heater as shown in illustration below.

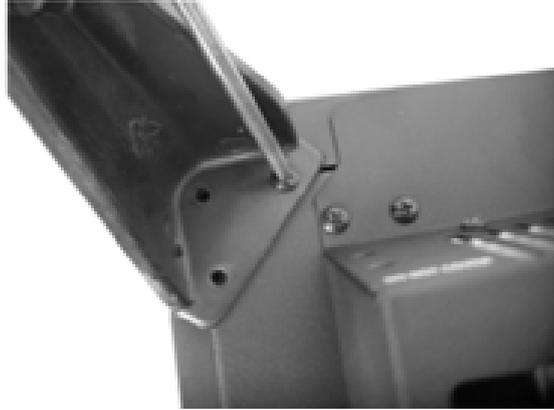

Note: The screws needed for the fitting of the feet are enclosed in the plastic bag containing the heater Instruction booklet.

1. Place the heater upside down on a soft cloth or carpet (To avoid causing any damage during assembly of the feet).
2. Position the feet to align with the corresponding holes location on the base of the heater, secure with screws supplied and tighten them with screw driver.

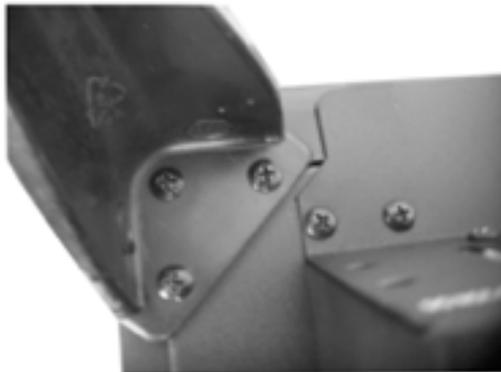


Instructions for Use:

To access the control panel, pull the knob on the front drawer cover downwards.

Plug the fireplace into a power outlet.

This fireplace can be operated with the switches located on the rear panel of the fireplace.

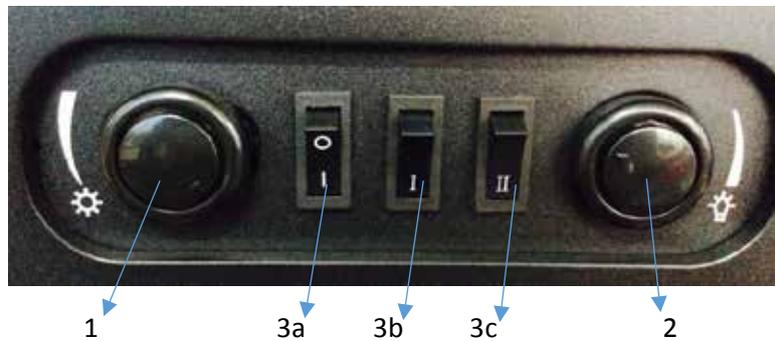

1. Rotate thermostat control (1), clockwise or anti-clockwise to achieve desired heating level.

2. Increase or decrease the flame effect by rotating the flame adjustment switch (2).

3a. Switch (3a) switches on/off electricity supply to the heater and flame effect. This is the switch which needs to be used to turn the unit on or off.

3b. Switch (3b) switches on/off 900W heat output

3c. Switch (3c) switches on/off 1800W output with switch 3b


Safety Cut-out:

Warning: This appliance is fitted with a built in safety cut-out, if the cut-out is activated, the unit will cease operation. Unplug from mains, check that the air intake area is not blocked or covered. Leave for an hour. Plug into mains again, if the unit works normally, if not the fault condition has not been removed.

Bulb Replacement:

Unplug from mains supply.

- Loosen the three screws at the front of the log bed. And then take off the fixed plate.
- Pull the log bed from the both ends to lift up the log bed decoration. Two bulbs are located underneath (see the figure below).

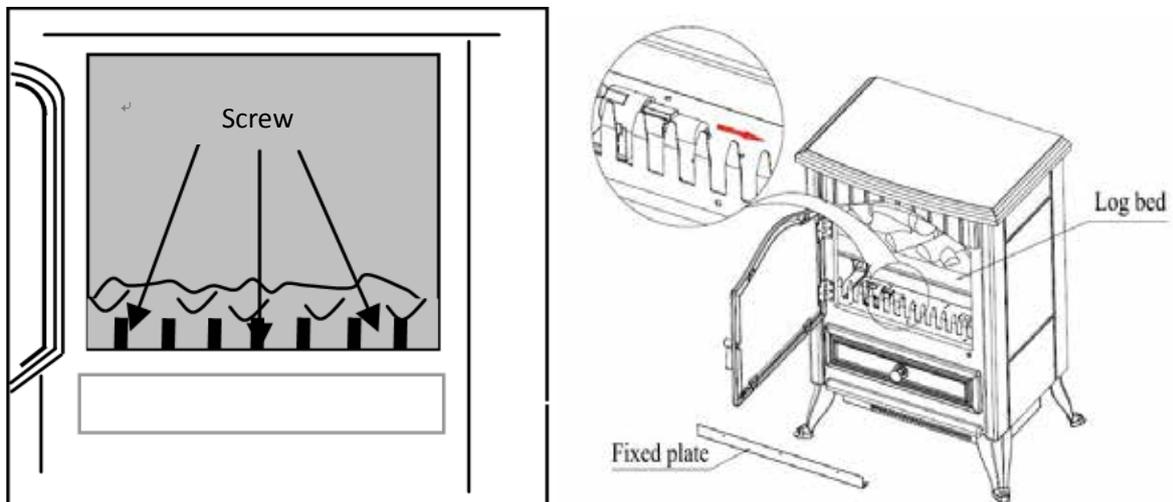

- Allow the heater to cool down completely before bulb replacement is performed. Take care not to touch the bulb with bare hands if the heater has been used recently as the bulbs will be hot.
- Remove the defective bulb by pulling it out of the holder.
- Replace with a 25W G9 halogen bulb.
- Ensure that the bulb is pushed into position correctly.
- To reassemble, follow the above instructions in reverse order.

Troubleshooting:

Issue	Solution
Unit does not work / does not heat	<ul style="list-style-type: none">· Check if the unit is plugged in the power outlet.· Check if the unit is in Standby mode. If so, turn the unit ON.· Check if the heat is turned OFF.· Check for safety cut-off operation.
No flame effect	<ul style="list-style-type: none">· Check if the unit is plugged in the power outlet.· Check if the unit is in Standby mode. If so, turn the unit ON.

Cleaning & Maintenance:

- Switch off and disconnect from the power supply before attempting any maintenance or cleaning in order to reduce the risk of fire, electric shock to persons or damage to property.
- Warning - Always disconnect from the power supply before cleaning fireplace.
- For general cleaning, use a soft, clean duster. Never use abrasive cleaners. The glass viewing screen should be cleaned thoroughly with a soft cloth. Do NOT use proprietary glass cleaners.
- Be careful not to touch the heating elements. Do not allow any water or any other liquid to enter the housing or control panel.
- Always keep the air inlet and outlet openings free from any dust or fluff – use a vacuum cleaner fitted with a dusting brush to remove accumulated dust when necessary. Do not probe any opening to remove dust or fluff.

Storage:

If the heater is not in use for a long period, pack the heater and user manual into the original box and store in a cool, dry and well-ventilated place.

Technical Specification

Supply: 220-240V~ 50Hz

Rated power: 1850W

Lighting: Max 25W G9 halogen bulb

LENOXX

www.lenoxx.com.au

 1300 666 848

 LenoxxElectronics

 LenoxxElectronics

 @LenoxxAustralia