

Model:  
PETGK6



# smart

## Pet Grooming Kit



Model: PETGK6

Batch: PR4303

Please read and retain these instructions for future reference.

This appliance is intended for household use only.

The illustrations used in the manual are to illustrate the operation method and structure of the product. Where there is a small difference between the physical item and the illustrations, please take the physical as the standard.

### **About the product:**

No need for pricey grooming and salon trips when you can enjoy professional results with this Pet Grooming Kit straight from your own home.

This 12-piece set comes equipped with a clipper, USB charging cable, 4x comb attachments, cleaning brush, lubricating oil bottle, scissors, nail clipper, nail file and metal hair comb, so you can give your furry friends the full-on pampering treatment. Enjoy cordless convenience as you make precise cuts with the high-performance ceramic blade at five adjustable blade lengths – 0.8, 1.1, 1.4, 1.7, or 2mm. You also have the option of using four interchangeable comb attachments – 3, 6, 9, or 12mm.

The upgraded Q-SUS low-noise technology, quiet design runs the clipper below 60dB and is the perfect solution for those with the most timid of pets. The high capacity 1200mAh battery will provide a running time up to two hours and at a quick charging time of between 4 – 5 hours for a full charge. At 5500rpm (revolutions per minute), this home Pet Grooming Kit is both powerful and easy to operate, making it the perfect choice for your furry companion's grooming needs.

### **Features:**

- Accessories: Clipper, USB charging cable, 4x comb attachments, cleaning brush, lubricating oil bottle, scissors, nail clipper, nail file, metal hair comb
- USB Charging Line: 3.7V
- Power: 5W
- Battery: 1200mAh lithium AA size
- Charging Time: 4 - 5 hours
- Running Time: 2 hours

### **Safety info:**

Do not disassemble the product yourself.

Watch out for electric shock. Do not wash and get wet. Do not use the product in the bathroom or near water.


Do not place it at high temperatures (over 40 degrees Celsius) or low temperatures (below 0 degrees Celsius).

Pay attention to the sharp blade

Please pay attention to the sharp blade when cutting hair close to the ears. Do not wash the hair trimmer under water as it is not waterproof.

Please change the blade when it becomes blunt.

## Product overview:

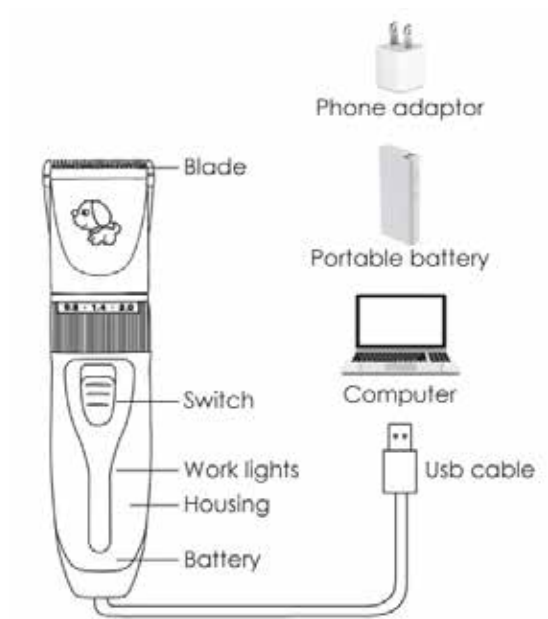

*\*Computer, portable battery and phone adaptor are not included.*

## Re-Charging the pet groomer:

Insert the charging plug into the slot on the hair clipper.

Plug the USB connector into a USB adapter (phone adaptor or portable battery/power bank or computer).

Plug the USB adapter plug into an electrical outlet after making sure that the hair clipper is switched off.

The best charging condition is 5-40 degrees Celsius.

The charging time is 4 - 5 hours. The battery reaches its best condition after four to five uses.

The work light will remain on when the pet groomer is connected to charge. When charging is complete the light will still remain on, it will not go off.

Do not overcharge as this will affect battery performance.

You should charge the product when the battery is empty or after a long period of non-use.

## Operation:

Disconnect the USB charge lead before use.

Push the switch upwards to turn on the clippers.

Push the switch downwards to turn off the clippers.

### Adjusting the blade:

Turn the dial adjuster for your desired length.


## Adjustable 5-size Blade and Guide Combs



**Fitting the combs:**



## Cleaning:

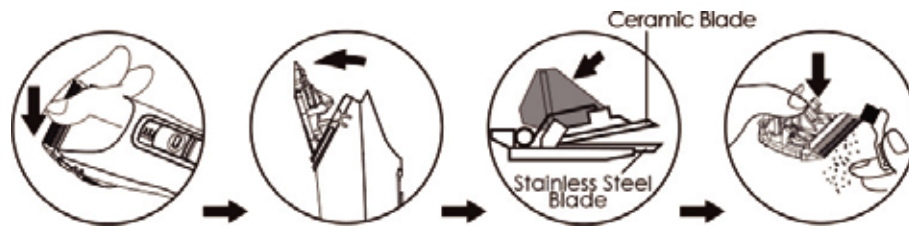

Before unloading the blade, make sure that you have switched off the hair clipper. Use your thumb to remove the blade as shown above.

Use the brush to remove any remaining hair between the top and bottom blades. Please do not disassemble the spring of the blade if it breaks.

Use the brush to remove any remaining hair from the hair clipper.



After cleaning the blade, add 2 – 3 drops of lubricant between the upper and lower blades. Otherwise, the edge of the blade may become dull, make strange noises, give off heat and reduce performance.

Replace the blade. If executed correctly, you will hear a clicking sound.

## Blade maintenance tips:

The blades are the most important part of this hair clipper and need to be well maintained at all times for maximum cutting performance.

Oiling the blade provides low-friction, very thin film lubricant between the cutting blades so that the blade can make a full cutting stroke without getting hot from frictional heat.

Rinses abrasive particles and hair out between the blades

If you cut into dirt, immediately clean your blades with hair clipper oil to rinse them out. Move the blades back and forth to remove the dirt particles.

**Replacing the re-chargeable battery:**



Open the battery cover.

Remove the battery.

Replace with a 1200mAh lithium AA size

Replace the battery as per the polarity indicator.

Put the battery cover back into position.


**LENOXX**

[www.lenoxx.com.au](http://www.lenoxx.com.au)

 1300 666 848

 LenoxxElectronics

 LenoxxElectronics

 @LenoxxAustralia