

**3+**  
AGES

# ELECTRONIC KEYBOARD

 
## INSTRUCTIONS



**37-KEY  
ELECTRONIC  
KEYBOARD**

MODEL NO: 2038 / 2039  
BATCH NO: PR3982

## PARTS

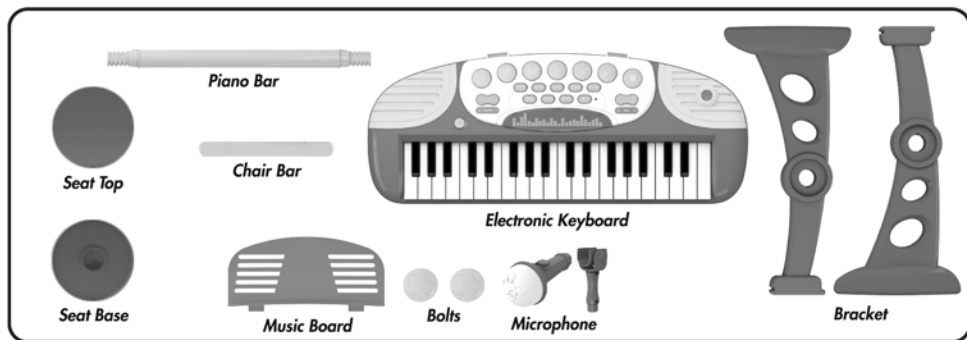

9 Demo Songs

37 Piano Keys

Timbre

One Key Play


One Key,  
One Song

Volume &  
Tempo


Record &  
Replay




*Microphone*

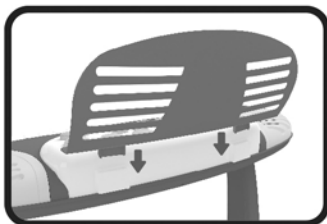

*Music Board*

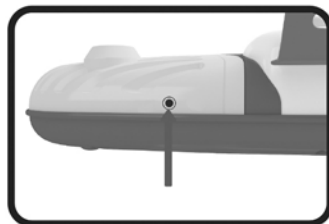

*Microphone Line*

  x3 1.5v AA  
BATTERIES REQUIRED  
(not included)

**REWARDS YOUR CHILD'S  
EVERY STEP  
WITH MUSIC & LIGHTS!**

## Product Description:

**LENOXX**

2038 / 2039

- 37 black and white keys
- Detachable Microphone
- 5 different styles of beats
- 5 kinds of musical instruments to imitate playing
- Recording and playback functions
- 9 Demo Songs
- Adjust the tempo and volume
- 4 LED lights
- Microphone plug wire port
- Independent sheet music stand

## How to use:

### 1. Turn on the power

After assembling the keyboard, toggle switch to "ON".

### 2. Black and white keys

37 black and white keys, press any one.

### 3. Beat convert button

Select one of 5 different rhythms, press the button to select the rhythm, you can hear the rhythm being played.

### 4. Instruments convert button

Select one of 5 different instruments, press the selected key, sound can be mixed with tones being played.

### 5. Play / Stop / Record button

Press the Record button, it can be recorded for 18 seconds long while playing music. Press the Play button to play the recorded music. Press the Stop button to delete the recorded music, it can also stop playing the kind of music or sound effects.

### 6. Song demo button

Press this button to play built-in music, press the button again to play the next song. Press the Stop button to stop playing music. If you press the okon button then press the black and white keys at random, it can be played into a song.

## 7.The volume control buttons

Press the left to adjust to a larger volume, press the right to adjust to a smaller volume.

## 8.Beat Speed button

Press the left to adjust to a faster speed, press the right to adjust to a slower speed.

## 9.LED lights

4 LED lights flash with the rhythm of music played.

## 10.Microphone plug wire port

Insert the configured microphone into the microphone plug wire port.



**FUN LEARNING**



*Product may vary slightly from image shown.*



**LENOXX**

[www.lenoxx.com.au](http://www.lenoxx.com.au)

1300 666 848