 


# LENOXX

## CD815

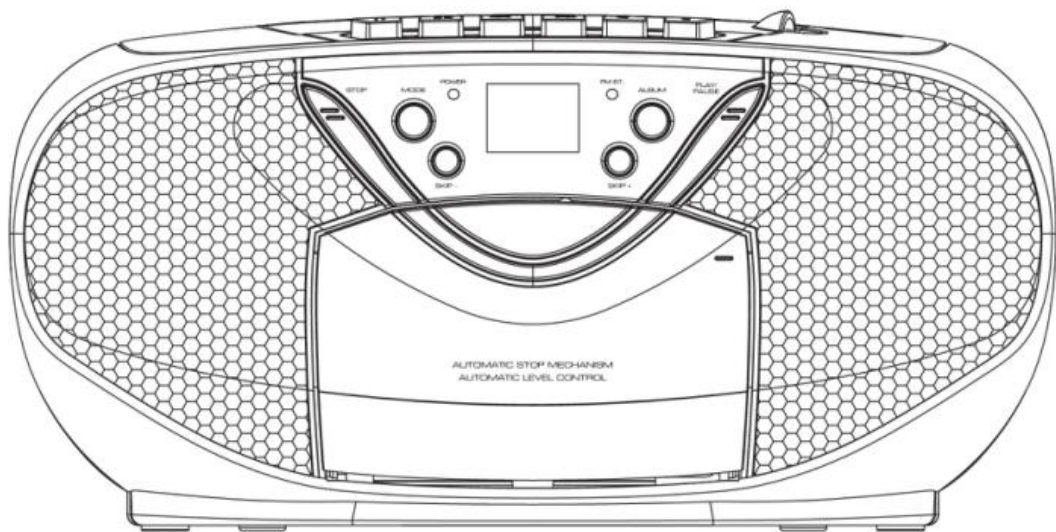

### Instruction Manual

Model no: CD815 | Batch no: PR4057

PLEASE READ AND RETAIN THESE INSTRUCTIONS  
FOR FUTURE REFERENCE.

Important information for your safety is specially marked. It is essential to comply with these instructions in order to avoid accidents and prevent damage to the machine:

**WARNING:**

This warns you of dangers to your health and indicates possible injury risks.

**CAUTION:**

This refers to possible hazards to the machine or other objects.

**NOTE:** This highlights tips and information.

**General Safety Instructions**

Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing. If you give this device to other people, please also pass on the operating instructions.

- To avoid the risk of fire or an electric shock, you should not expose the device to rain or moisture. Consequently, do not use the device in the immediate vicinity of water for example near a bathtub, a swimming pool or in a damp cellar.
- Do not immerse in water.
- Do not use the device in extremely hot, cold, dusty or damp places.
- Ensure that the power cord is not kinked, trapped or brought into contact with heat sources.
- Ensure that the power cord does not present a tripping hazard.
- Never touch the power plug or the cable with wet hands.
- Only connect the device at a properly installed plug socket. Pay attention that the specified voltage corresponds to the voltage of the plug socket.
- The power cord must always be easily accessible.
- Always insert the batteries correctly.
- Do not cover up any ventilation openings with objects such as newspapers, tablecloths, curtains, etc.
- Exposed ignition sources such as burning candles may not be placed onto the device.
- Use on a flat surface only.
- Never open the housing of the device. Incorrect repair scan constitutes a considerable risk for the user. Should the device become damaged, in particular the mains supply cable, do not operate the device any longer, but rather have it repaired at a service centre with qualified repair persons to avoid a hazard.
- Check the mains supply cable regularly for damage.
- For safety reasons a broken or damaged mains lead may only be replaced by an equivalent lead from our customer service department or qualified repair person.
- The use of apparatus in moderate climates

- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- If the device is not used for a longer period, remove the plug connector from the plug socket or take out the batteries.

These symbols may be found on the machine and are intended to indicate the following:



The lightning symbol should advise the user of parts in the inside of the device which carry dangerously high voltage levels.



The symbol with an exclamation mark should advise the user of important operation or maintenance instructions in the accompanying documentation.



Devices bearing this symbol work with a “class 1 laser” for tracing the CD. The built-in safety switches should prevent the user being exposed to dangerous laser light, which is invisible to the human eye, when the CD compartment is opened.

These safety switches must not be bypassed or altered; otherwise there is a risk of being exposed to the laser beam.

### **Children and Frail Individuals**

- In order to ensure your children’s safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.

### **WARNING!**

**Do not allow small children to play with the packaging. There is a danger of suffocation!**

- This device is not intended to be used by individuals (including children) who have restricted physical, sensory or mental abilities and/or insufficient knowledge and/or experience, unless they are supervised by an individual who is responsible for their safety or have received instructions on how to use the device.
- Children should be supervised at all times in order to ensure that they do not play with the device.

### Special safety information

This device works with a class 1 laser.

### **Notes:**

- a. Dirty or scratched CD may cause a skipping problem. Clean or replace the CD.
- b. If an error display or malfunction occurs, disconnect the AC cord and remove all the batteries. Then turn the power back on.

## BEFORE OPERATION

 
### **Notes: CONCERNING COMPACT DISCS.**

Since dirty, damaged or warped discs may damage the appliance, care should be taken of the following items:


- a. Usable compact discs. Use only compact disc with the mark shown below.
- b. CD compact disc only with digital audio signals.




### Overview of the Components

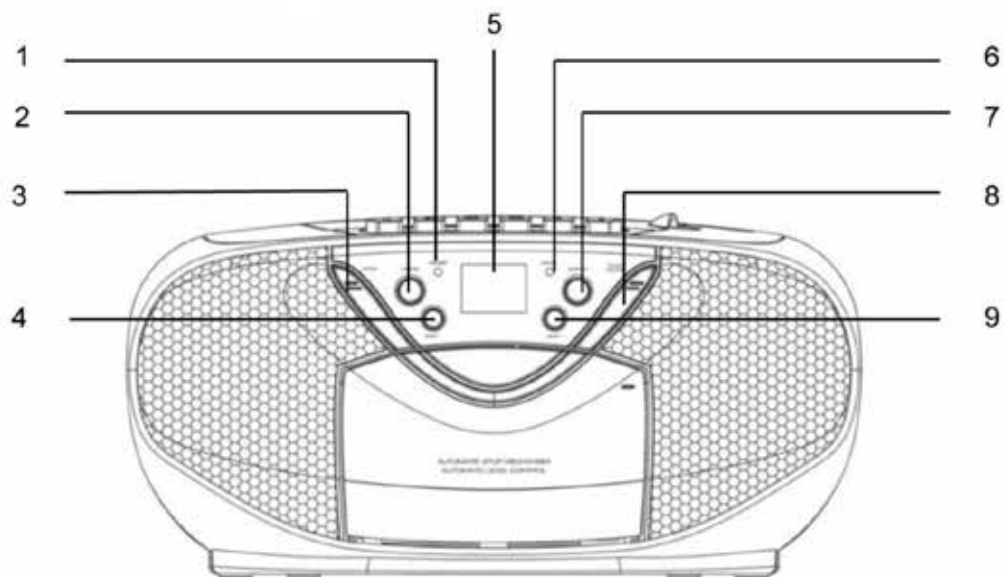

 
1. POWER INDICATOR
2. REPEAT (CD FUNCTION)
3. STOP (CD FUNCTION)
4. SKIP- (CD FUNCTION)
5. DISPLAY
6. FM STATION INDICATOR
7. PROGRAM (CD FUNCTION)
8. PLAY/ PAUSE (CD FUNCTION)
9. SKIP+ (CD FUNCTION)

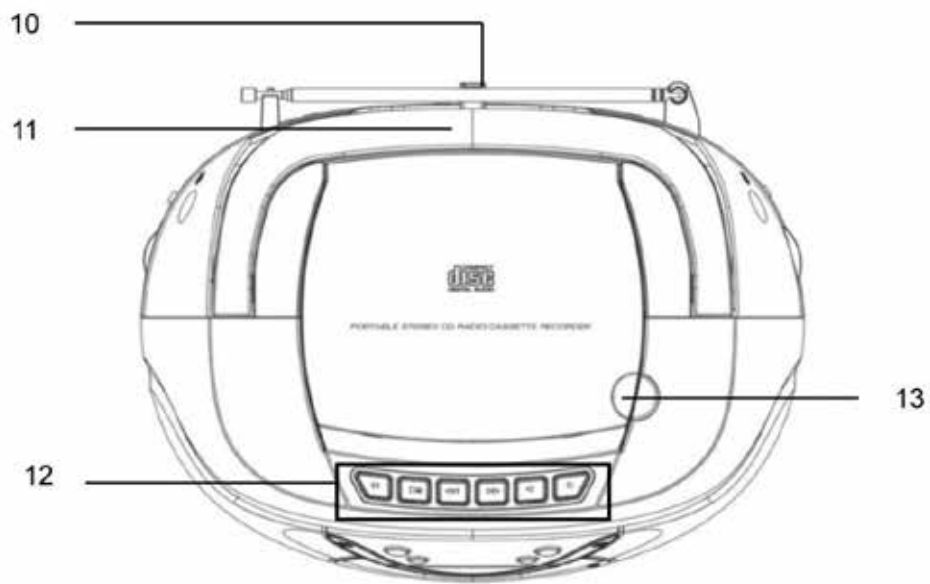

 - 10. FM ANTENNA
- 11. HANDLE
- 12. TAPE BUTTONS
- 13. CD DOOR OPEN/CLOSE

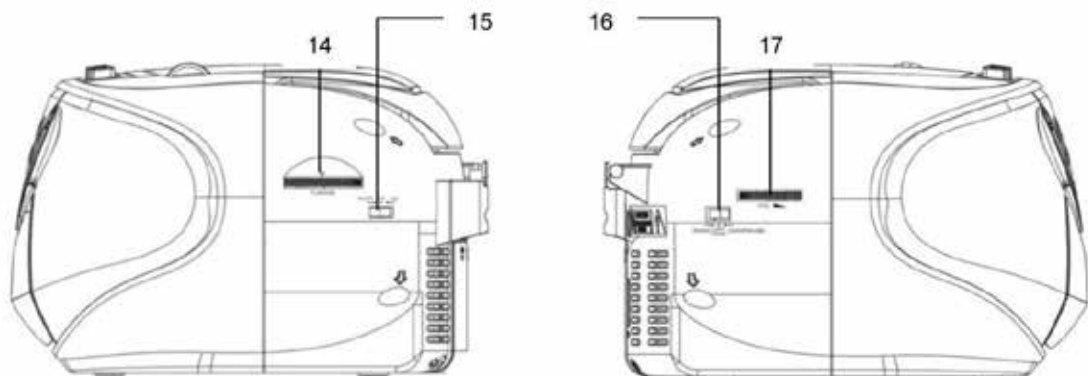

 - 14. TUNING CONTROL
- 15. BAND SELECTOR
- 16. FUNCTION SELECTOR
- 17. VOLUME CONTROL

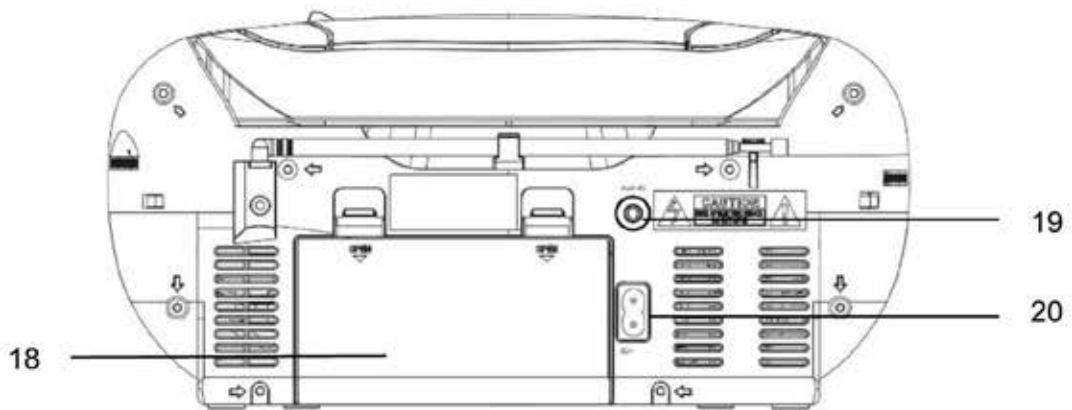

18. BATTERY DOOR

19. AUX-IN JACK

20. AC SOCKET

### **Start-up of the device/introduction**

- Select a suitable location for the device, such as a dry, flat, non-slip surface on which it is easy to operate the machine.
- Ensure that the device is sufficiently ventilated.
- Remove the protective film from the display if it is still present.

### **Power Supply**

- Ensure that the voltage is the same as that indicated on the model identification plate.
- Connect the power cable supplied (see battery compartment if necessary) to a properly installed safety power socket and the mains connector AC on the back of the machine.

### **Inserting the Batteries (not included)**

1. Open the lid of the battery compartment.
2. Insert 6 "C" size 1.5 V batteries. Please ensure that the polarity is correct (see the floor of the battery compartment)!
3. Then close the battery lid.

### **NOTE:**

When a mains cable is connected the batteries are automatically switched off.

### **CAUTION:**

- Batteries can leak and lose battery acid. When not using the system for a long period of time, remove the batteries.
- Different battery types or new and used batteries must not be used together.
- Do not dispose of batteries with household waste. Return old batteries to the respective collection facilities or your dealer.

**WARNING:**

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like. Danger of explosion!

**Listening to the Radio**

1. Turn the function selector switch to the RADIO position.
2. Select desired band by using the "BAND" selector.
3. Adjust radio frequency to your desired station by using the "TUNING" control.
4. Adjust the "VOLUME" control to the desired level.

 
**FM / FM-Stereo reception**

- Set the "BAND SELECTOR" to select the MONO(FM) or STEREO (FM ST.) mode for FM reception.

The Stereo indicator light up to show FM ST. mode when FM-Stereo reception is available.

**Cassette Operation**

**The controls for the cassette function are located on the sop of the CD/CASSETTE PLAYER:**

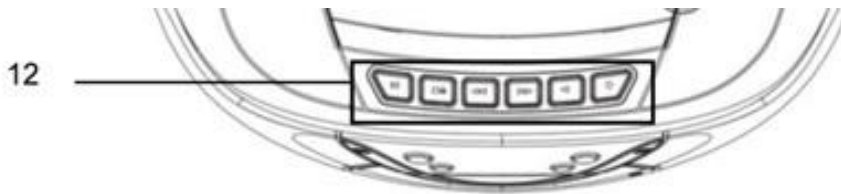

In order from left to right, the buttons are:

- Pause
- Stop/Eject
- Rewind
- Fast Forward
- Play
- Record

**Playing Cassettes**

1. Turn the function selector switch to the OFF/TAPE position.
2. Press the STOP/EJECT button to open the cassette compartment.
3. Insert a recorded audio cassette into the compartment with the tape opening facing upwards and the side you wish to listen to facing the front (full spool to the right). Then close the cassette compartment again. You just push it gently closed with your hand.

4. Press the PLAY button to listen to the tape.
5. With the STOP/EJECT button you can stop play-back.
6. Wind the tape forwards or backwards in the direction of the arrow buttons.  
F.FWD = forwards, RWD = reverse.
7. Always press the STOP/EJECT button when changing the direction or stopping the tape.  
This prevents damage to the machine and the tape.
8. If the STOP/EJECT button is pressed again the flap of the cassette compartment opens.
9. In order to interrupt playback briefly, press the PAUSE button. Pressing again continues playback.

### **Recording Cassettes**

1. Insert an audio cassette with the side on which you wish to record facing forwards (full reel on the right).  
Ensure that the cassette is not copy-protected (the copy protection tab on the top narrow side of the cassette must not have been removed).
2. Select the source from which you wish to record with the function switch and then start playback from this source if necessary. The sound source which you are listening to is the one from which the recording is made. The recording level is controlled automatically.  
Changing the volume does not change the recording.
3. Please press the "RECORD" button (the PLAYBACK button is automatically pressed down at the same time). Recording now begins. All previous recordings are automatically erased.
4. The recording can be interrupted briefly using the PAUSE button or stopped by means of the STOP/EJECT button.

### **Playing CD**

1. Set the "FUNCTION" selector to "CD" mode.
2. Open the CD door and place a CD disc with the label up on the CD compartment.
3. Close the CD door.
4. Focus search is performed if disc is inside. Total number of tracks is read and appears on the display.
5. Press the "PLAY / PAUSE" button to start playing the CD.
6. Adjust the "VOLUME" control to the desired level.
7. Press the "PLAY / PAUSE" button again when you want to stop playback temporarily.
8. In order to remove a CD, please press the "STOP" button, open the CD compartment and lift the CD out carefully.  
Always keep the CD door closed.



**NOTE:**

If a disc is inserted the wrong way around, respectively if no disc is inserted, then “No” appears on the display.

Programmed Play

This can be used to program any desired sequence of tracks.

Up to 20 tracks for CD can be programmed for disc play in any order.

Be sure to press the “STOP” button before use.

1. Press the “PROGRAM” button, the display will show “01” and flash.
2. Select desired track by using the “SKIP +” or “SKIP -” button.
3. Press the “PROGRAM” button again to confirm desired track into the program memory.
4. Repeat step 2 and 3 to enter additional tracks into the program memory.
5. When all the desired tracks have been programmed, press the “PLAY / PAUSE” button to play the disc in the order you have programmed.
6. Press the “STOP” button twice to terminate programmed playback.

MODE

Press the “REPEAT” button before or during playing CD disc, each press switches the mode function as follows:

- 1 - REPEAT
- 2 - REPEAT ALL
- 3 - NORMAL PLAYBACK

AUX IN socket

Under “CD” or “RADIO” mode, if you want to play from AUX-IN jack, please connect the external device via a 3.5mm AUX-IN lead (not included) to the AUX-IN jack.

You can hear the sound from the external device through the speakers and you may adjust the volume on the external audio device.

For further functions please refer to the user manual of the external audio device.

This socket is not an earphone jack.

**NOTE:**

Adjust the volume of the external device to a comfortable level.

## Cleaning and Maintenance

### **WARNING:**

Do not immerse the device in water.

- Always remove the mains plug before cleaning the machine.
- Any marks on the surface can be wiped off with a slightly damp cloth without any additives.

# LENOXX

[www.lenoxx.com.au](http://www.lenoxx.com.au)

 1300 666 848

 LenoxxElectronics

 LenoxxElectronics

 @LenoxxAustralia