

AIR FRYER ACCESSORIES

8" GRILLING SET



Model: AFA160

Batch: PR4401

PLEASE READ AND RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

HOUSEHOLD USE ONLY.

The illustrations used in this manual are to illustrate the operation method and structure of the product. Where there is a small difference between the physical item and the illustrations, please take the physical as the standard.

IMPORTANT SAFETY AND GENERAL INSTRUCTIONS:

Read all instructions thoroughly before first use, even if you are familiar with this type of product. The safety precautions mentioned in this manual reduce the risk of burns, fire, electric shock and injury when followed correctly. Keep this manual in a safe place for future reference. If applicable, pass these instructions onto the next owner of this product.

Caution: Children can become trapped in packing film when playing and suffocate.

- Do not allow children to play with the packaging, danger of suffocation.
- Do not store the accessories whilst they are still hot.
- The manufacturer or retailer is not responsible for damage caused by improper use.
- This product is for household use only; it is not intended for commercial use.

HOT SURFACES: The surfaces are likely to get hot during use. Use oven mitts (not included) when handling a hot accessory.

TO AVOID DAMAGE TO YOUR BENCH TOP AND SPLASH BACK, DO NOT PLACE AN AIR FRYER (NOT INCLUDED) OR HOT ACCESSORIES DIRECTLY ON BENCH TOP.

Please use air fryer and place any hot accessories on heat proof material and on a dry, level and even surface. Leave a minimum distance of 20cm from walls and other heat sensitive materials.

Do not place the air fryer or hot accessories against a wall or against a wall or against other appliances.

Additional care should be taken when placing air fryers or any hot accessories on bench top surfaces or near splash backs where such materials (Acrylics, timber, stone etc.) do not have the high heat resistant properties.

Place the air fryer or any hot accessories on top of a heat resistant material between bench and appliance and further away from wall surfaces/ splash backs.

Before using your Air Fryer Accessories for the first time:

Read the safety instructions in this manual before operating. Before using this appliance for the first time, follow the steps below:

1. Remove all packaging materials and contents from the packaging.
2. Wash the cake tin in warm soapy water. Dry thoroughly before use.

ACCESSORIES:



8" GRILLING PAN- Ideal for 5 Litre capacity air fryers or larger. The grilling pan creates the perfect surface for cooking meat, pizza, pies, omelets, quesadillas and more. Prepare your ingredients, place them in the grilling pan, add the pan to the air fryer, set the air fryers timer and temperature and when cooking is complete, enjoy the tasty results.



8" WIRE RACK- The wire rack maximizes the vertical space within your air fryer. It can be used as a second layer to cook food on or just as one layer for grilling. It is the perfect surface for grilling delicious hamburgers, juicy steaks and succulent chicken breasts. Prepare your food as desired. A layer of food can be placed on the bottom of an air fryers cooking surface, next add the wire rack on top so the feet are touching the bottom of the air fryers cooking surface. Then add a layer of food on top of the wire rack.



SILICONE TONGS AND SILICONE BRUSH- Useful when creating an edible masterpiece. The tongs are ideal for turning food over. The brush is great for basting and applying oil to foods.

CLEANING AND MAINTANCE: Wash the accessories in warm soapy water and dry thoroughly. The accessories are not dishwasher safe.

Healthy Choice™

Dear Valued Customer,

Thank you for purchasing the AFA160, Air Fryer Accessories -
8" Grilling Set.

Your comments are important to us because they help us provide high quality, competitive and innovative products, just for you. If you are satisfied with your product, we kindly ask you to please take a moment to write a review on www.productreview.com.au and/or through the website where you have purchased your item.

If you have any questions concerning our products, please call our customer service department on **1300 666 848**. *Your feedback makes us better.*

Thank you for choosing Healthy Choice by Lenoxx.

LENOXX

LENOXX ELECTRONICS AUSTRALIA PTY LTD

Importers & Wholesalers of Electronics & Toys

6 Oban Court Laverton North Vic 3026

ABN: 97 844 321 851

Customer Service: 1300-666-848

Email Address: Lenoxx@lenoxx.com.au

Web Site: www.lenoxx.com.au

WARRANTY CARD

WE WARRANT THIS PRODUCT TO BE FREE FROM DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL USE FOR A PERIOD OF 12 MONTHS AFTER DELIVERY TO THE ULTIMATE USER AND WE WILL REPAIR AT NO CHARGE OR REPLACE IT AT OUR OPTION SHOULD IT BECOME DEFECTIVE UNDER THIS WARRANTY PROVIDING YOU SUBMIT PROOF OF PURCHASE (ORIGINAL SALES RECEIPT) WHEN MAKING A REQUEST UNDER THIS WARRANTY. THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT, WHICH HAS BEEN SUBJECT TO MISUSE NEGLECT OR ACCIDENT. THE WARRANTY DOES NOT COVER: HANDLES, BATTERIES, ELECTRICAL CORDS, ANTENNAS, MICROPHONES, BROKEN CABINETS OR ANY OTHER ACCESSORIES USED IN CONNECTION WITH THE PRODUCT. UNDER NO CIRCUMSTANCES WILL LENOXX ELECTRONICS (AUSTRALIA) PTY LTD BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

IMPORTANT MESSAGE: BEFORE SENDING YOUR UNIT TO LENOXX FOR REPAIR YOU MUST SUPPLY PROOF OF PURCHASE (Original Sales Receipt) TO VALIDATE YOUR WARRANTY.

THIS WARRANTY IS IN ADDITION TO OTHER RIGHTS AND REMEDIES OF THE CONSUMER UNDER A LAW IN RELATION TO THE GOODS OR SERVICES TO WHICH THE WARRANTY RELATES.

"Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure".

**For warranty registration please visit our website
www.lenoxx.com.au**

Service Direct Line (Australia only): 1300 - 666 - 848

MODEL NO:

BATCH NO: